

Quick Start Guide

SL-75

Thank you for purchasing this product. This guide will provide you with a brief summary of the steps involved in successfully installing the SL-75 compact marine lantern.


Your system will consist of: 1 x SL-75 marine lantern, switch key and IR Programmer.

Other tools required to successfully set up this product, are:

- Internet connection
- Star2M[®] portal access for GSM & satellite devices
- SealitePro for Bluetooth Connectivity

Introduction

The purpose of this quick start guide is to present a brief summary of the steps involved in the installation of the SL-75 compact marine lantern, from the physical installation of the product itself to configuration into Star2M for GSM and satellite connected devices.

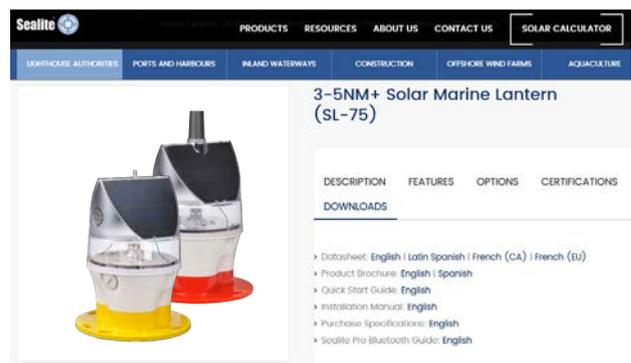

Step 1: Installing the SL-75 lantern

Remove the SL-75 marine lantern, switch key and IR programmer from the packaging.

Carefully place on a solid work surface.

Step 2: Visit Sealite website


Visit www.sealite.com and download the [User Manual](#) from the Sealite website. This document provides in depth information on how to fully configure your SL-75 compact marine lantern.

Step 3: Power the unit

Use the switch key to remove the SL-75 bung to access the ON/OFF toggle switch. Refer to Diagram 1.

Use the switch key to switch ON the SL-75 and place the SL-75 bung back on the base.

Diagram 1 - Lantern Base

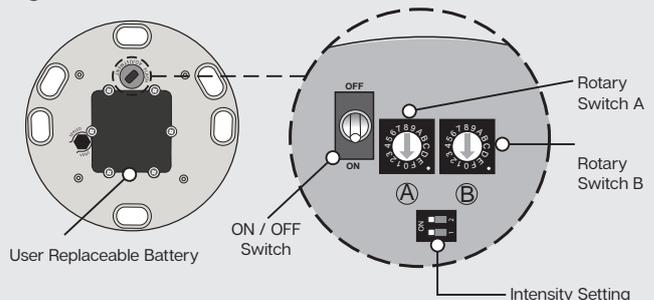

For the full manual, visit the link below:
sealite.com/3-5nm-stand-alone-marine-lantern/



Step 4: Pre-installation check

The factory default setting is 0.5 seconds ON and 4.5 seconds OFF with operating mode of Dusk till Dawn. The flash character can be changed using the using the switch key to adjust the rotary switches (refer diag. 1).

Alternatively use the IR programmer or download the SealitePro® App and connect the lantern to Bluetooth®. [Download the user manual to set alternate settings.](#)

Step 6: Connecting to the SealitePro® App

Download the SealitePro® App to your device. It is available for both Android® and iOS platforms.

Once downloaded, open the App on your device. Connect to the lantern, by pressing "Connect via Bluetooth®".

Select a lantern displayed on the "Scan for Lanterns" screen. Expand the "Lantern Information" drop down menu then press Identify. The lantern will flash quickly several times as confirmation.

Note that only one device may be connected at any one time.

Step 7: Charging the battery

For optimal performance, new lanterns should be left in full sun for 1-2 days for the battery to charge, prior to installation.

Step 9: Satellite* & GSM enabled devices

To activate Satellite Connectivity and GSM Monitoring services please login to your Star2M® account or visit star2m.com to register.

Step 10: IMEI number (Satcom devices)

For satellite enabled devices an IMEI number is required to activate your Iridium unit. The IMEI number can be found underneath the light-head as well as a copy enclosed with this guide.

*** Iridium® connected satellite technology is factory fitted and available at point of sale only.**

Step 5: Activate the lantern

To activate for testing, ensure the lantern is in darkness for 30 seconds. The SL-75 will begin to flash. In the event the lantern does not flash, ensure the unit is in adequate darkness.

Once the lantern has started to flash, expose the lantern to light and within 30 seconds the SL-75 will stop flashing.



Step 8: Preferred installation location

For best lantern performance, ensure solar modules are not covered or in shade. Lanterns exposed in clear view of the sky will result in optimum charging results.

Use the [Sealite Solar Calculator](#) to ensure the intended operational characteristics are valid for your geographical location.



Head Office
+61 (0)3 5977 6128

Sealite USA
+1 (603) 737 1311

Sealite UK
+44 (0)1502 588026

Sealite Asia
+65 9119 8770

